


Cisco Mobility Express

Step 1. Set Up

1. Power Mobility Express master access point.

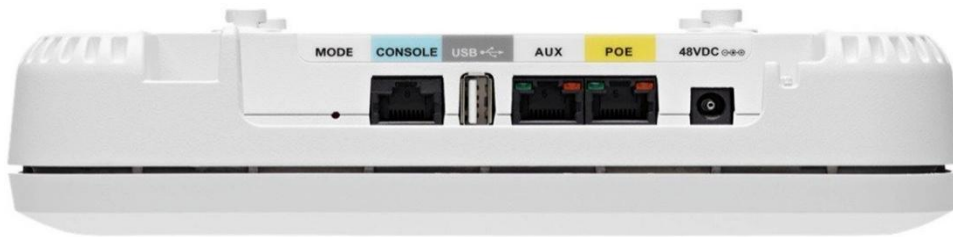

2. Use a standard Ethernet cable and connect the LAN port off your broadband modem or router directly to Ethernet port marked "POE" on the access point.
3. **NOTE:** If you have a POE switch in your network, you can directly power and connect to the AP by connecting the switch board to the primary POE board on the back of the AP.



4. Wait for the LED light to blink GREEN. (This may take a few moments)
5. Mobility Express software will automatically broadcast the Cisco AirProvision WiFi network.
6. If using your PC browser, smartphone or tablet to connect: connect to SSID "Cisco AirProvision" using the key 'password'.

Step 2. Configure

7. Open a web browser and access: <http://192.168.1.1>



8. Open Cisco Wireless app and select Provisioning tab.

A screenshot of the Cisco Aironet 1850 Series Mobility Express provisioning interface. The background is a solid blue color. At the top center is the Cisco logo. Below it is a small, glowing blue and white spherical icon. The text "Cisco Aironet 1850 Series Mobility Express" is displayed in white. Below this, a white text prompt reads "Welcome! Please start by creating an admin account." There are three white input fields: the first is labeled "Create admin username" and has a red exclamation mark icon to its right; the second is labeled "Create admin password" and has a lock icon to its left; the third is labeled "Confirm admin password" and has a lock icon to its left. At the bottom of the form is a dark grey button labeled "Start".

9. Go through the Setup Wizard and provide the information requested.
10. Start with the credentials for the admin user name and password.

The screenshot shows the 'Set Up Your Controller' step of the Cisco Aironet 1850 Series Mobility Express setup wizard. The interface includes the following fields and values:

- System Name: Mobility-Express
- Country: United States (US)
- Date & Time: 12/31/2015, 15:55:15
- Timezone: Pacific Time (US and Canada)
- NTP Server: 0.0.0.0 (optional)
- Management IP Address: 10.10.10.2
- Subnet Mask: 255.255.255.0
- Default Gateway: 10.10.10.1

At the bottom of the form, there are two buttons: 'Back' and 'Next'.

11. Next type in the desired system name, fill in the country, date, time and time zone.
12. Next you need to type in a management IP address, which will later be used to browse the user interface.
13. You will need to determine a subnet mask address and a default gateway address. Then click NEXT.

Cisco Aironet 1850 Series Mobility Express

1 Set Up Your Controller ✓

2 Create Your Wireless Networks

Employee Network

Network Name: Employee-PSK ?

Security: WPA2 Personal ?

Pass Phrase: ?

Confirm Pass Phrase: ?

VLAN: Management VLAN ?

DHCP Server Address: 0.0.0.0 (optional) ?

14. Here you will put in the desired Wi-Fi network name for your business or home network.

15. Next type in a security password key, which should be used to connect to the Wi-Fi network.

Guest Network

Network Name: Guest ?

Security: Web Consent ?

VLAN: -New VLAN- ?

VLAN ID: 20 ?

DHCP Server Address: 0.0.0.0 (optional) ?

Back Next

16. You also have the option to set a Guest network access with open access or internal web authentication. Just add the desired network name for the Guest Wi-Fi, security password and the VLAN ID. Click NEXT.

Cisco Aironet 1850 Series Mobility Express

1 Set Up Your Controller ✓

2 Create Your Wireless Networks >

3 Advanced Setting v

RF Parameter Optimization

Client Density Low Typical High

Traffic Type Data

Back Next

17. You also get RF parameter optimization. This can be configured to the number of users on your network or the type of traffic that you expect which will be on your network. Click NEXT.
18. Confirm the settings. Hit submit. Mobility Express Controller will reboot automatically.

Step 3. Operate

19. Once the configuration is confirmed the master AP will push the configuration to any additional APs you connect as your network grows.
20. You can connect 25 APs and 500 devices on a single WiFi network.
21. Connect wirelessly or from a PC browser to monitor and manage your network. Use Cisco Wireless App from a smartphone or tablet to monitor your network.






Americas Headquarters
Cisco Systems, Inc.
San Jose, CA

Asia Pacific Headquarters
Cisco Systems (USA) Pte. Ltd.
Singapore

Europe Headquarters
Cisco Systems International BV Amsterdam,
The Netherlands

Cisco has more than 200 offices worldwide. Addresses, phone numbers, and fax numbers are listed on the Cisco Website at www.cisco.com/go/offices.

 Cisco and the Cisco logo are trademarks or registered trademarks of Cisco and/or its affiliates in the U.S. and other countries. To view a list of Cisco trademarks, go to this URL: www.cisco.com/go/trademarks. Third party trademarks mentioned are the property of their respective owners. The use of the word partner does not imply a partnership relationship between Cisco and any other company. (1110R)